

PINNACLE[®]
S P E A K E R S
*Speakers of the House Since 1976*SM

Inwall & Ceiling Speaker Installation Instructions:

- Place the cardboard cutout template on the wall or ceiling where you want the speaker to be mounted.
- Draw around the template and cutout the speaker mounting hole.
- Run quality speaker wire (12-16 gauge) to that location.
- Remove the grille from the speaker. Depending upon your model this may require prying at the edge of the grille with a small screwdriver or catching the grille by one of its holes using a small awl or grille pick.
- Connect the speaker wire to the speaker terminals and insert the speaker into the hole.
- There are screws around the perimeter of the face of the speaker (6 on the inwalls, 4 on the ceiling speakers). These screws connect to 'wings' in the rear of the speaker which will swing out and clamp the speaker to the wall or ceiling as they are tightened. Secure the speaker to the wall or ceiling by tightening these screws until the speaker is securely mounted.
- Reattach grille.

